


TYPE 2



*Banner not included,
shown for illustration
purposes only*




 TYPE 2

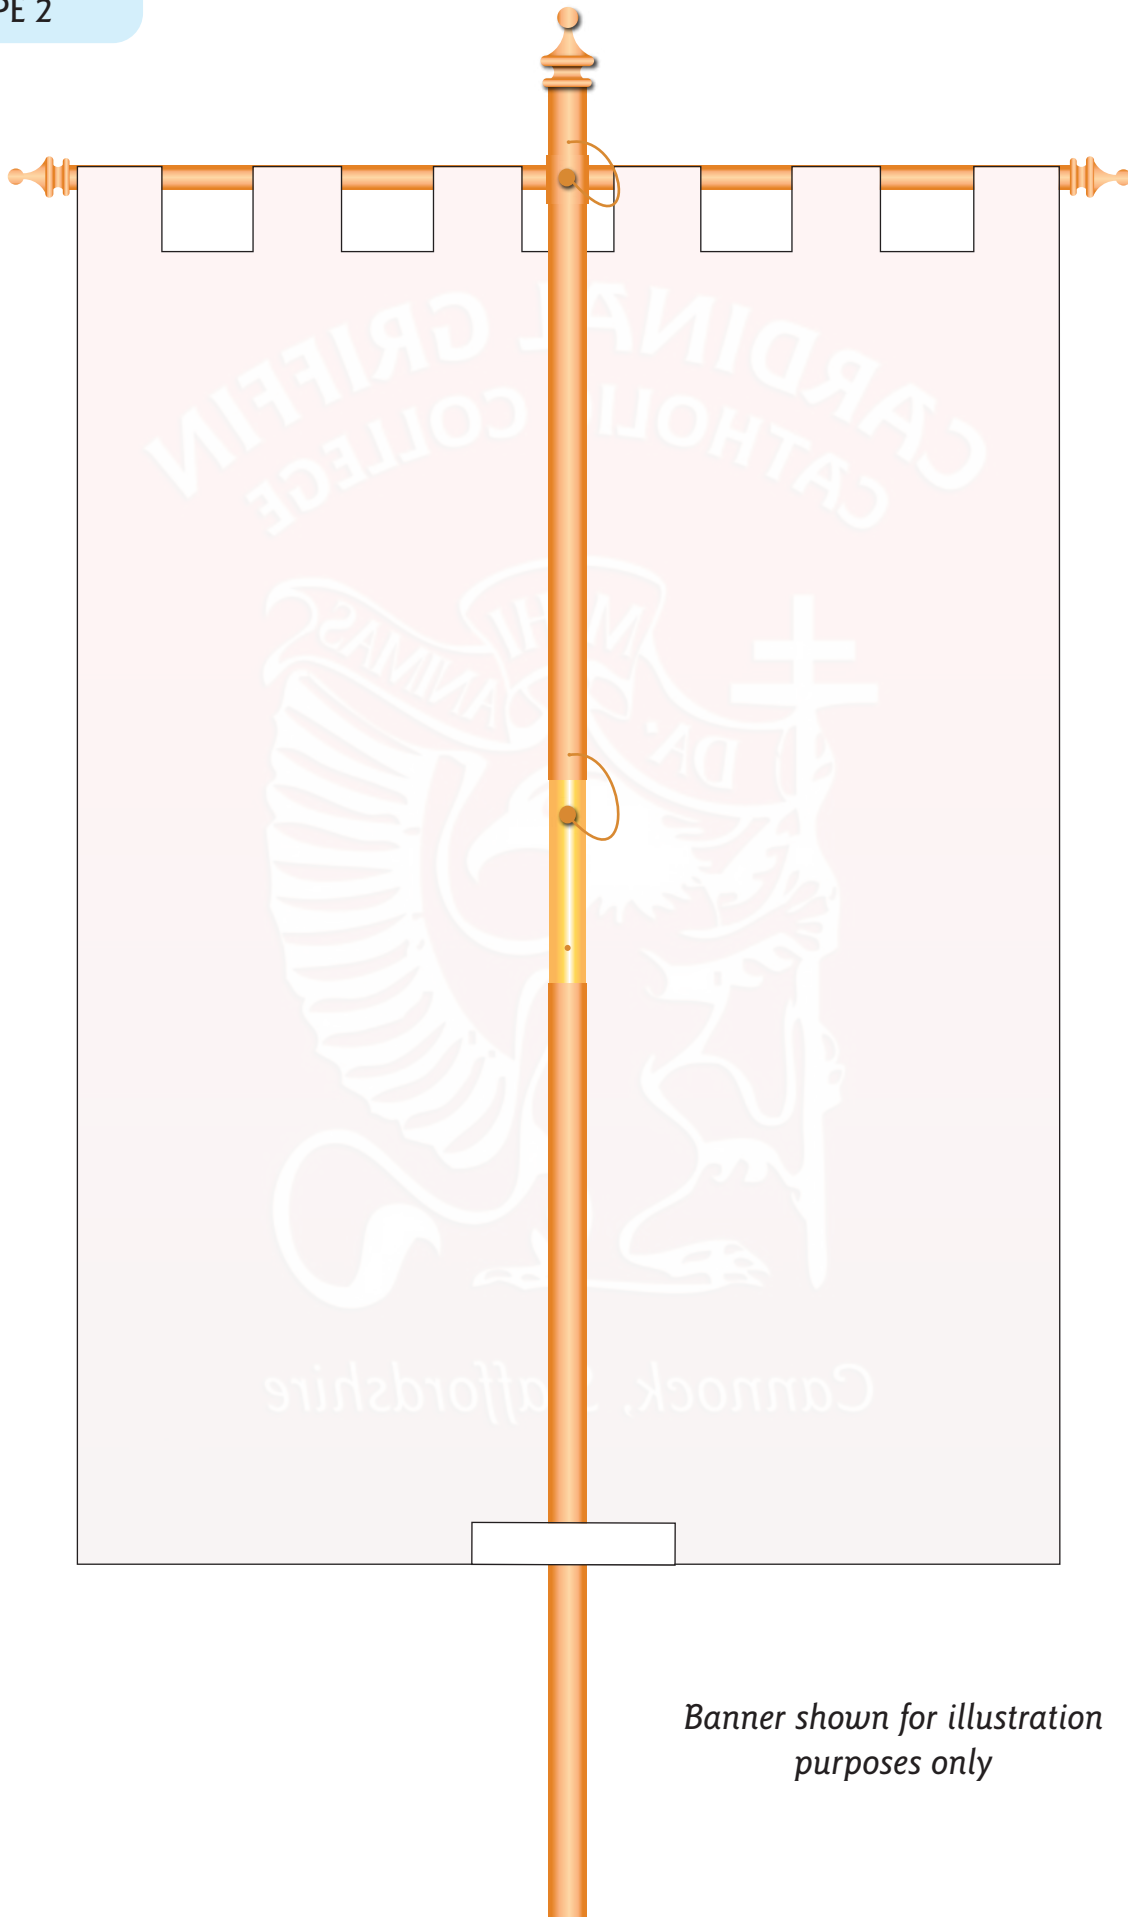

 Banner shown for illustration purposes only



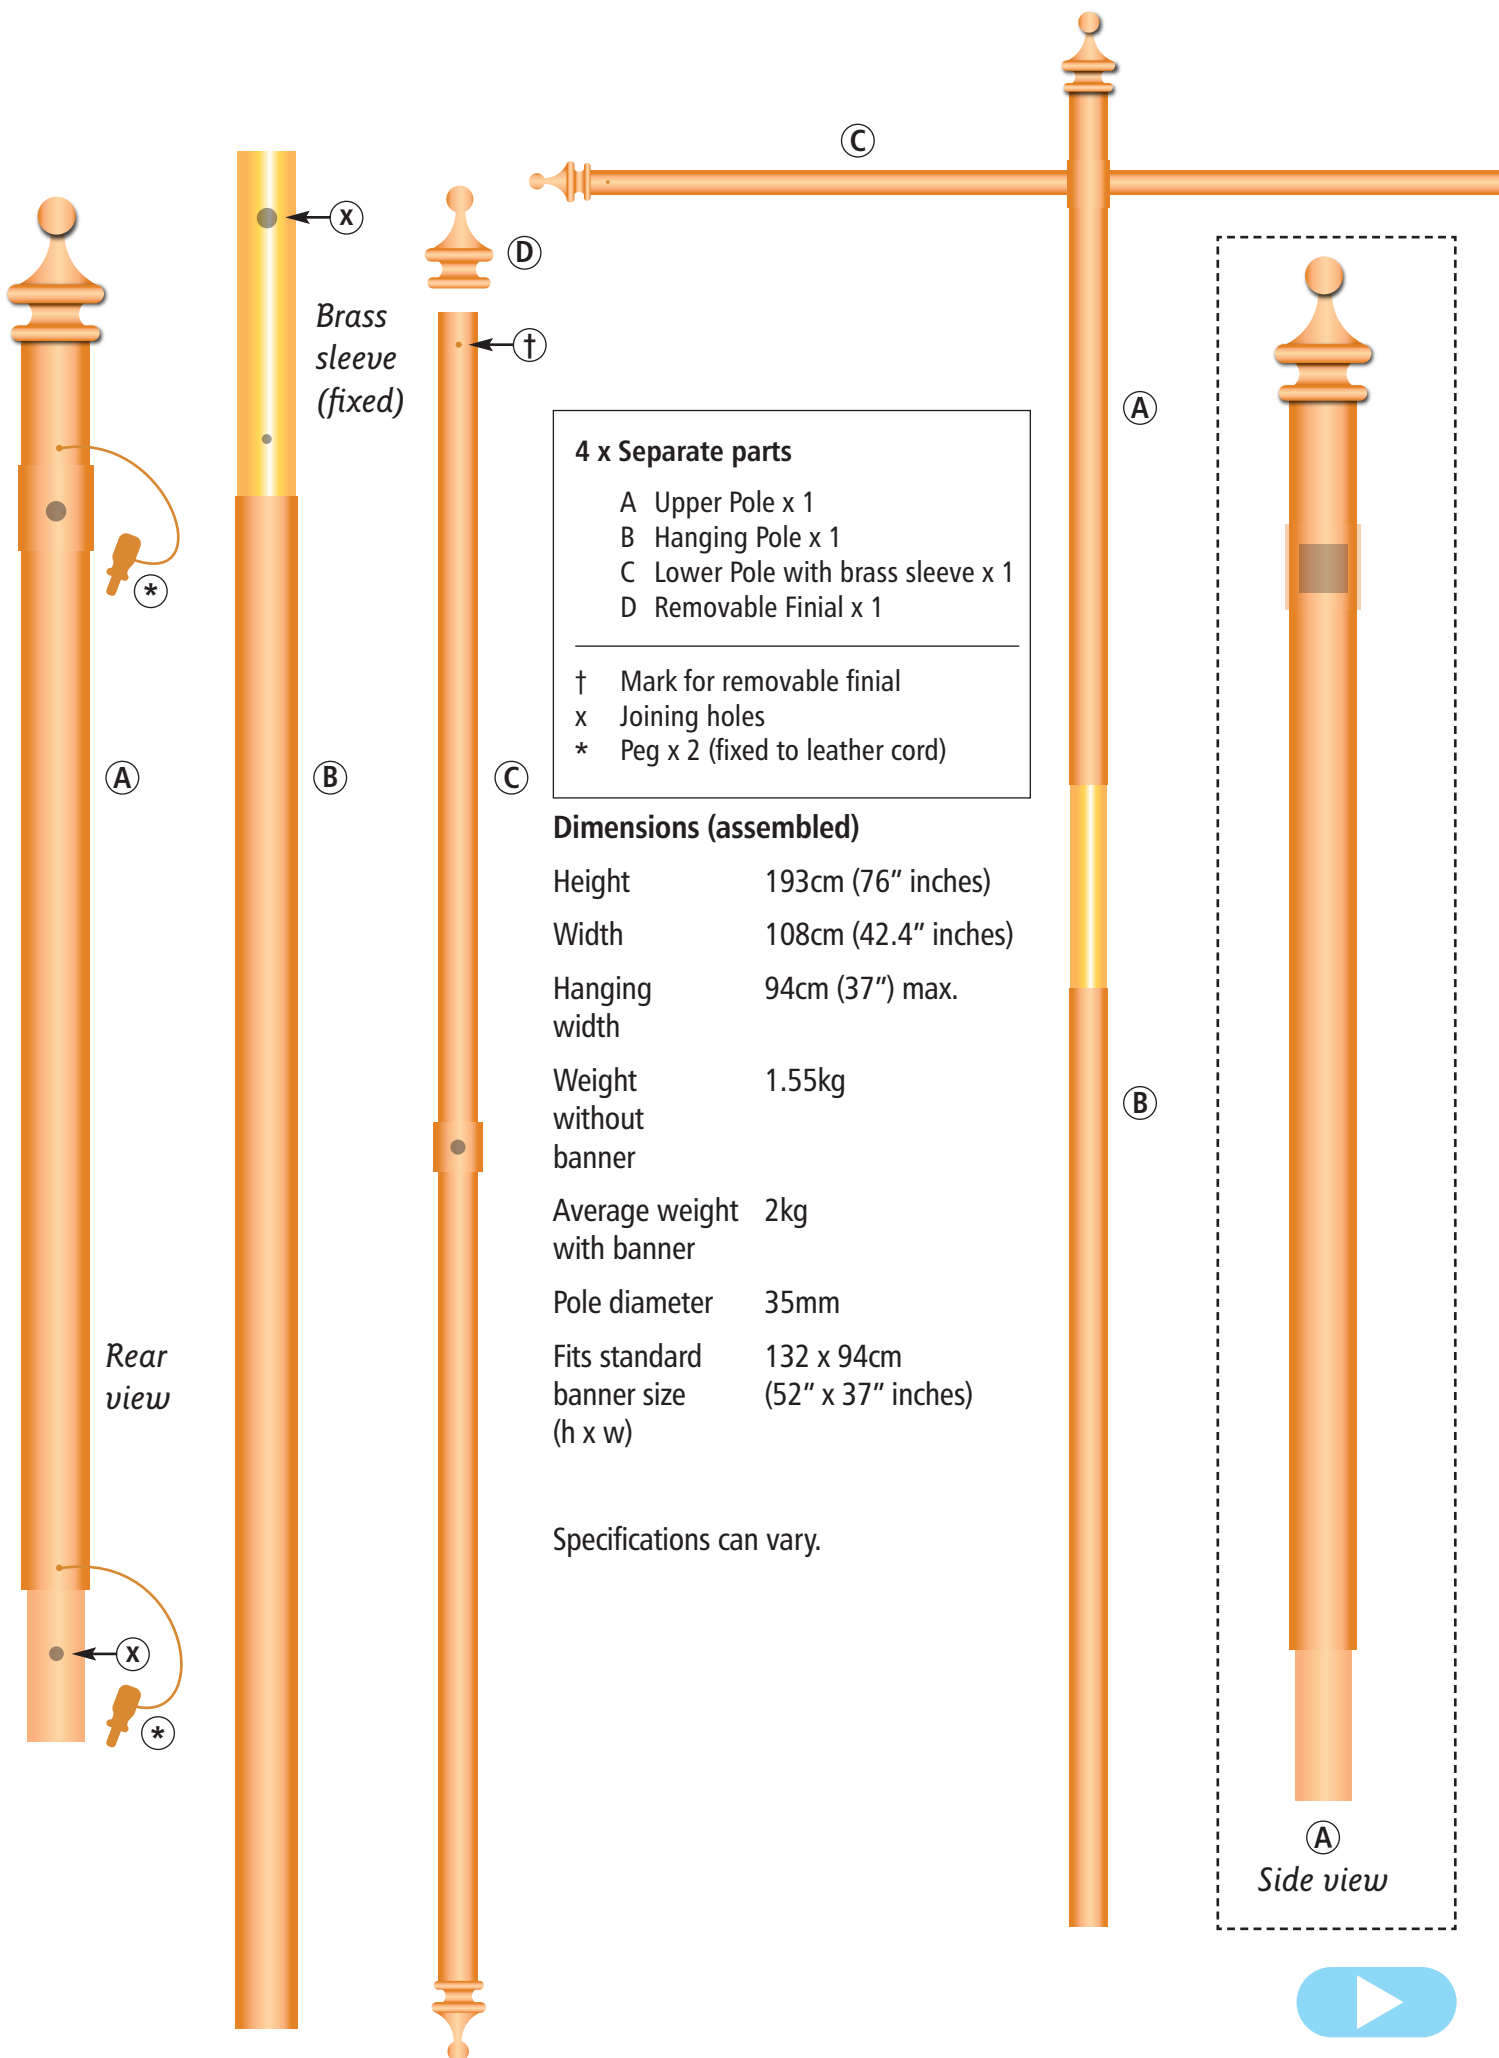

4 x Separate parts

- A Upper Pole x 1
- B Hanging Pole x 1
- C Lower Pole with brass sleeve x 1
- D Removable Finial x 1

- † Mark for removable finial
- x Joining holes
- * Peg x 2 (fixed to leather cord)

Dimensions (assembled)


Height	193cm (76" inches)
Width	108cm (42.4" inches)
Hanging width	94cm (37") max.
Weight without banner	1.55kg
Average weight with banner	2kg
Pole diameter	35mm
Fits standard banner size (h x w)	132 x 94cm (52" x 37" inches)

Specifications can vary.



TYPE 2

 Rear view

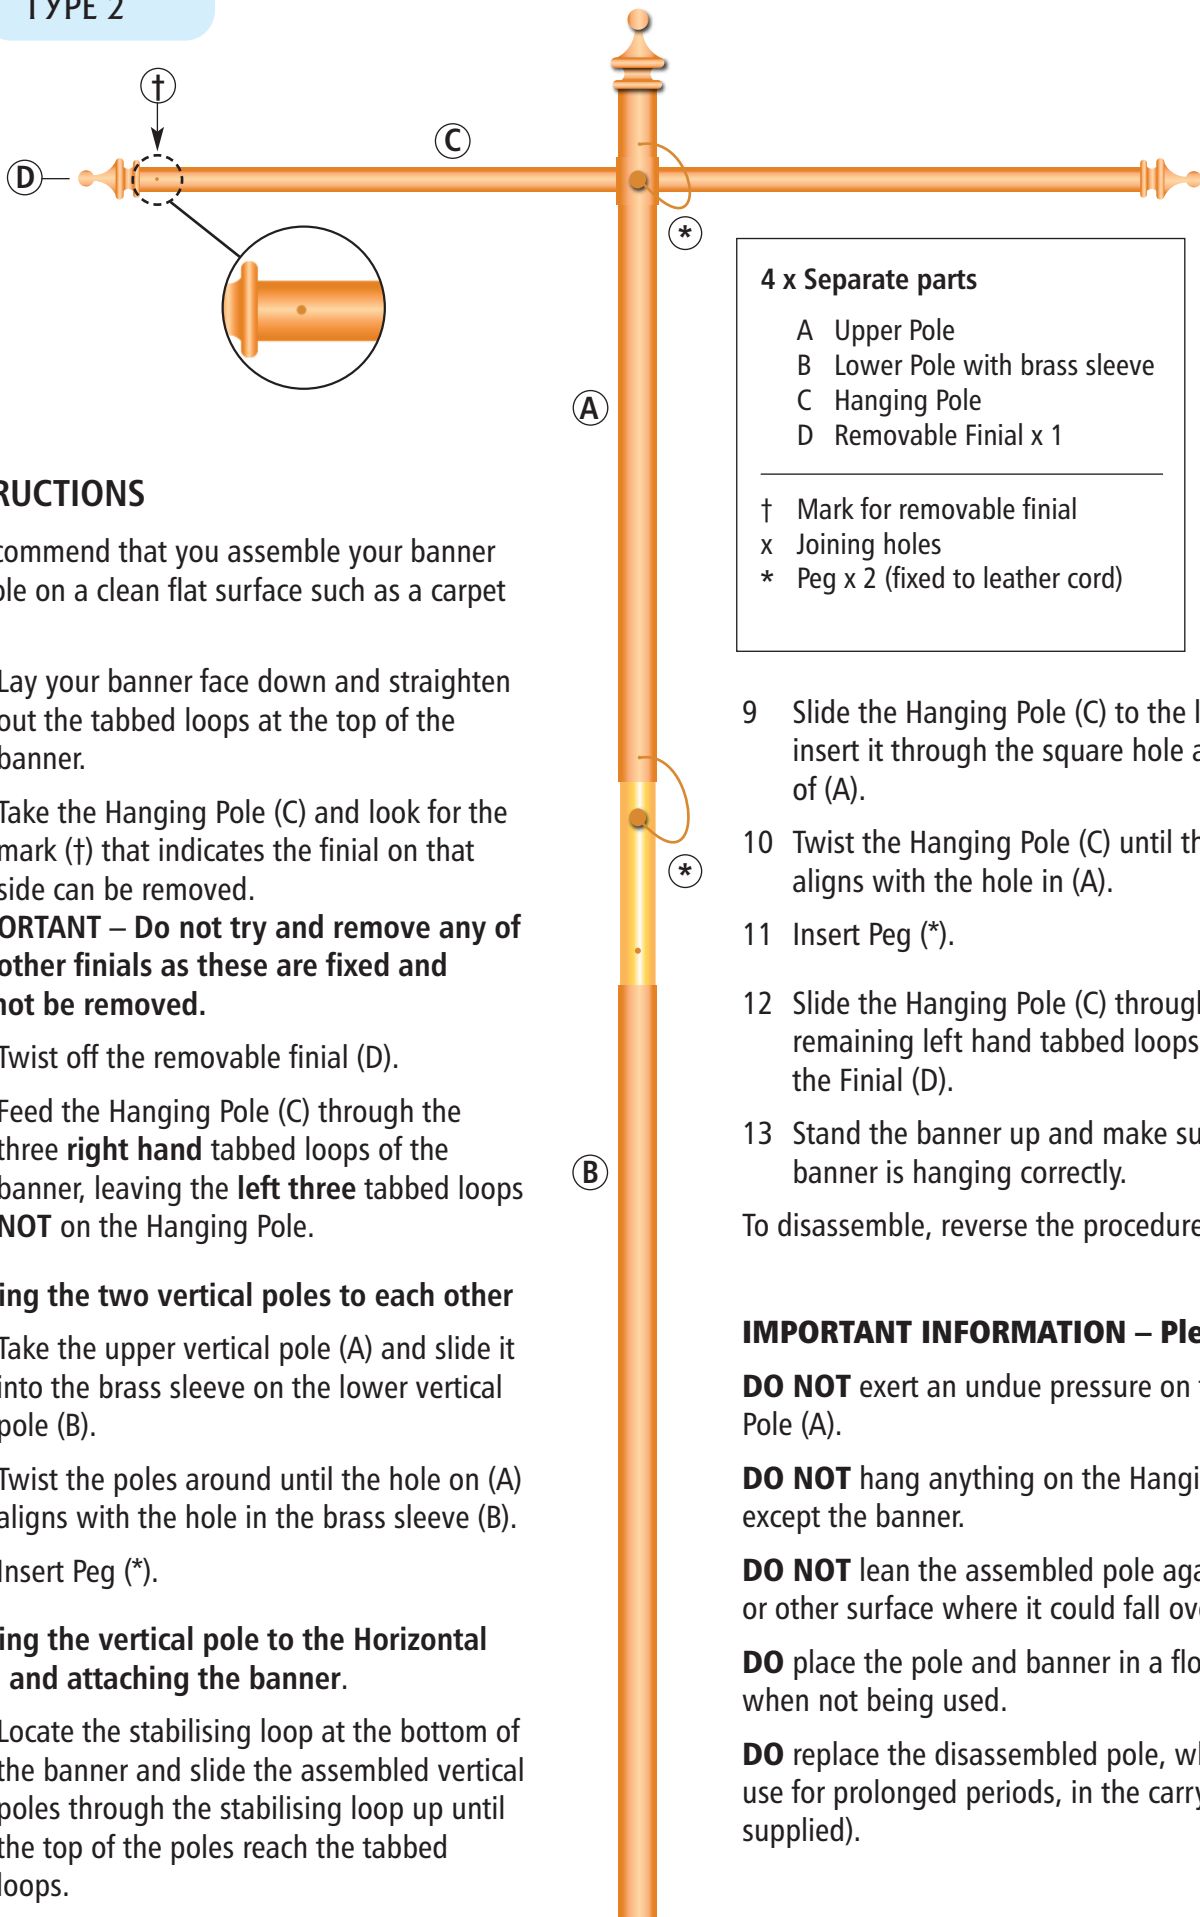

INSTRUCTIONS

We recommend that you assemble your banner and pole on a clean flat surface such as a carpet or rug.

- 1 Lay your banner face down and straighten out the tabbed loops at the top of the banner.
- 2 Take the Hanging Pole (C) and look for the mark (†) that indicates the finial on that side can be removed.

IMPORTANT – Do not try and remove any of the other finials as these are fixed and cannot be removed.

- 3 Twist off the removable finial (D).
- 4 Feed the Hanging Pole (C) through the three **right hand** tabbed loops of the banner, leaving the **left three** tabbed loops **NOT** on the Hanging Pole.

Joining the two vertical poles to each other

- 5 Take the upper vertical pole (A) and slide it into the brass sleeve on the lower vertical pole (B).
- 6 Twist the poles around until the hole on (A) aligns with the hole in the brass sleeve (B).
- 7 Insert Peg (*).

Joining the vertical pole to the Horizontal Pole and attaching the banner.

- 8 Locate the stabilising loop at the bottom of the banner and slide the assembled vertical poles through the stabilising loop up until the top of the poles reach the tabbed loops.

4 x Separate parts

- A Upper Pole
- B Lower Pole with brass sleeve
- C Hanging Pole
- D Removable Finial x 1

- † Mark for removable finial
- x Joining holes
- * Peg x 2 (fixed to leather cord)

These instructions are for use with a tabbed looped banner supplied by McCrimmons and may be different if you are using your own banner.

- 9 Slide the Hanging Pole (C) to the left and insert it through the square hole at the top of (A).
- 10 Twist the Hanging Pole (C) until the hole in it aligns with the hole in (A).
- 11 Insert Peg (*).
- 12 Slide the Hanging Pole (C) through the three remaining left hand tabbed loops and replace the Finial (D).
- 13 Stand the banner up and make sure the banner is hanging correctly.

To disassemble, reverse the procedure.

IMPORTANT INFORMATION – Please read

DO NOT exert an undue pressure on the Hanging Pole (A).

DO NOT hang anything on the Hanging Pole (A) except the banner.

DO NOT lean the assembled pole against a wall or other surface where it could fall over.

DO place the pole and banner in a floor stand when not being used.

DO replace the disassembled pole, when not in use for prolonged periods, in the carry bag (if supplied).